
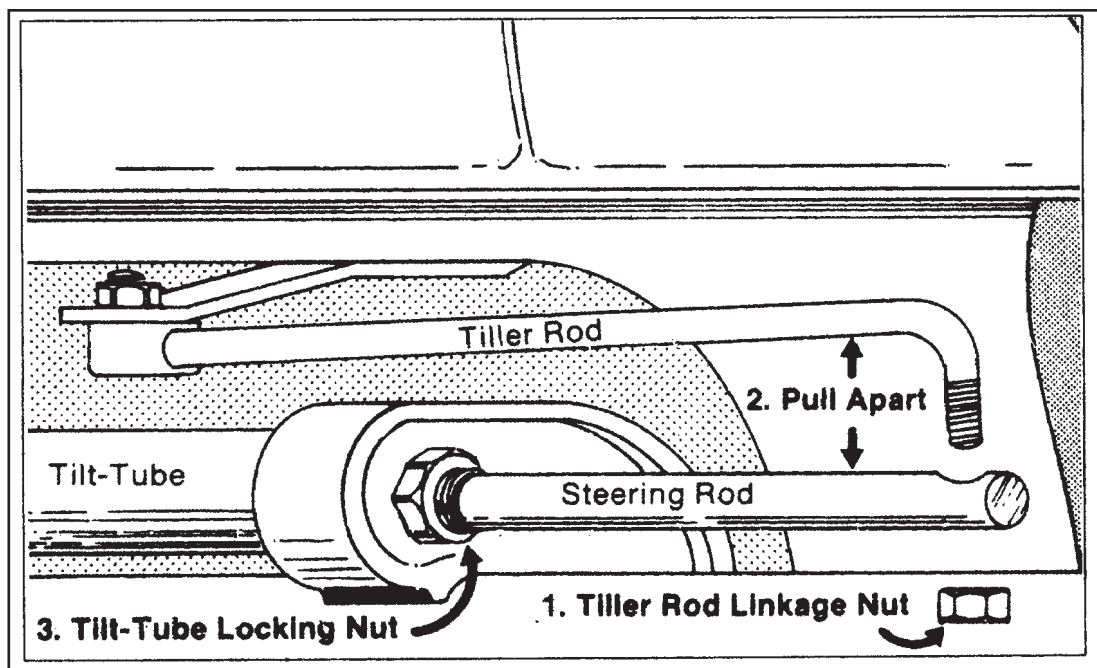


# Installing the **Steersman®** Steering Guard.

## Easy Installation Instructions

1. Remove tiller rod linkage nut.
2. Pull tiller rod apart from steering rod.
3. Remove locking nut from tilt-tube.  
(not necessary if at least three threads already exposed.)
4. Wipe steering rod clean.
5. Secure **Steersman** on exposed threads.
6. Make sure grease fitting is accessible.
7. Grease. Use hand-pumped grease gun only.  
**Caution:** Do not over-lubricate.  
1 full shot, 2 max.

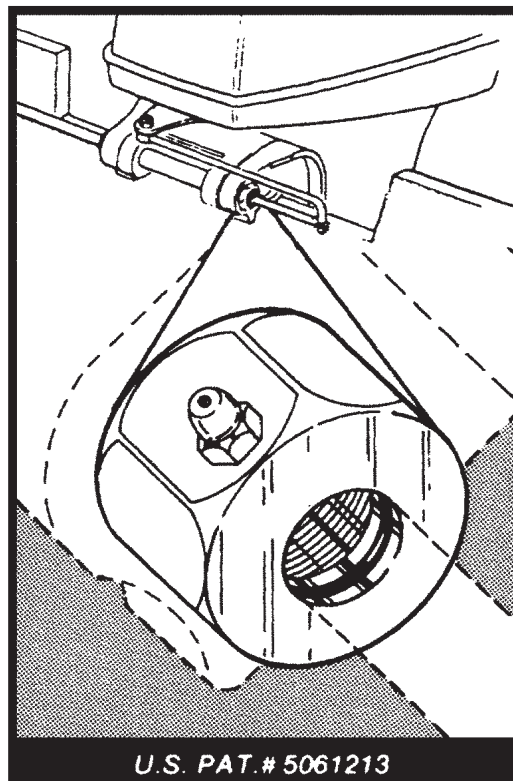

Worldwide Marine  
P.O. Box 273043  
Houston, Texas 77277-3043  
[www.steersman.com](http://www.steersman.com)